

SUMMARY / PLAN

1 GENERAL POINTS	4
1.1 DESCRIPTION OF THE MACHINE	4
1.2 GENERAL DESCRIPTION.....	4
1.3 COMPLIANCE WITH GUIDELINES AND STANDARDS; COMMISSIONING.....	4
1.4 SPECIFICATIONS	4
1.5 MACHINE LOGBOOK,	5
1.6 RECOMMENDATIONS FOR USE AND GENERAL SAFETY.....	6
1.7 ANCHORING.....	6
1.8 GUIDING THE PLATFORM ALONG A SHAFT.....	6
2 INSTALLATION AND USE	6
2.1 INSTRUCTIONS FOR INSTALLATION, ASSEMBLY, COMMISSIONING AND USE - TRAINING.....	6
2.1.1 <i>Installation and assembly of platform modules</i>	6
2.1.1.1 Assembly of the hoist-fall prevention-stirrups (x2)	7
2.1.1.2 Railing and stirrup assembly (x2)	7
2.1.1.3 Assembly of Side support-End assembly	8
2.1.1.4 Floor-structure assembly	8
2.1.1.5 Assembly of ledger strips.....	10
2.1.2 <i>Mounting accessories</i>	10
2.1.2.1 Protection roof.....	10
2.1.2.2 Support wheels.....	10
2.1.2.3 Guide along the rails	11
2.1.3 <i>Installing the control box</i>	12
2.1.3.1 Power.....	12
2.1.3.2 Box 3760T or M.....	13
2.1.3.2.1 Installation and connection of the cabinet.....	13
2.1.3.2.2 Commissioning	13
2.1.4 <i>Installation of cables for lifting and safety</i>	14
2.1.4.1 Inserting the hoisting cable; removing	14
2.1.4.2 Introduction of the safety cable; dismantling	14
2.2 DIAGRAMS AND SAFETY EXPLANATIONS	15
2.2.1 <i>Main dimensions</i>	15
2.2.2 <i>Safety devices</i>	15
2.2.2.1 In the hoist	15
2.2.2.1.1 Emergency lowering	16
2.2.2.1.2 Overload detector (except TX hoists)	16
2.2.2.1.3 Upper limit detector	16
2.2.2.1.4 Upper limit detector	16
2.2.2.2 Safety on the second cable using the SECURISTOP 600 tilt detector.....	16
2.2.2.3 In the control box.....	17
2.2.2.3.1 Phase controller.....	17
2.2.2.3.2 Anti-sway safety feature	17
2.3 DESCRIPTION OF THE WORK OR CONTROL STATION.....	17
2.4 NORMAL USE	18
2.5 DECOMMISSIONING.....	18
2.6 WARNINGS ABOUT CONTRAINDICATIONS	18
2.7 RESIDUAL RISKS	18
2.8 TOOLS	19
2.9 TRANSPORTATION, HANDLING, STORAGE, WEIGHT	19
3 MAINTENANCE - SETTINGS	19
3.1 HOUR METER.....	19
3.2 SETTING THE OVERLOAD	19
3.2.1 <i>In case of exceeding the permissible load</i>	20
3.2.2 <i>Overload limit setting</i>	20
3.3 MAINTENANCE OPERATIONS	21
3.3.1 <i>Preventive maintenance</i>	21
3.3.2 <i>Lubricating a hoist cable.....</i>	22