


No load limiter

option

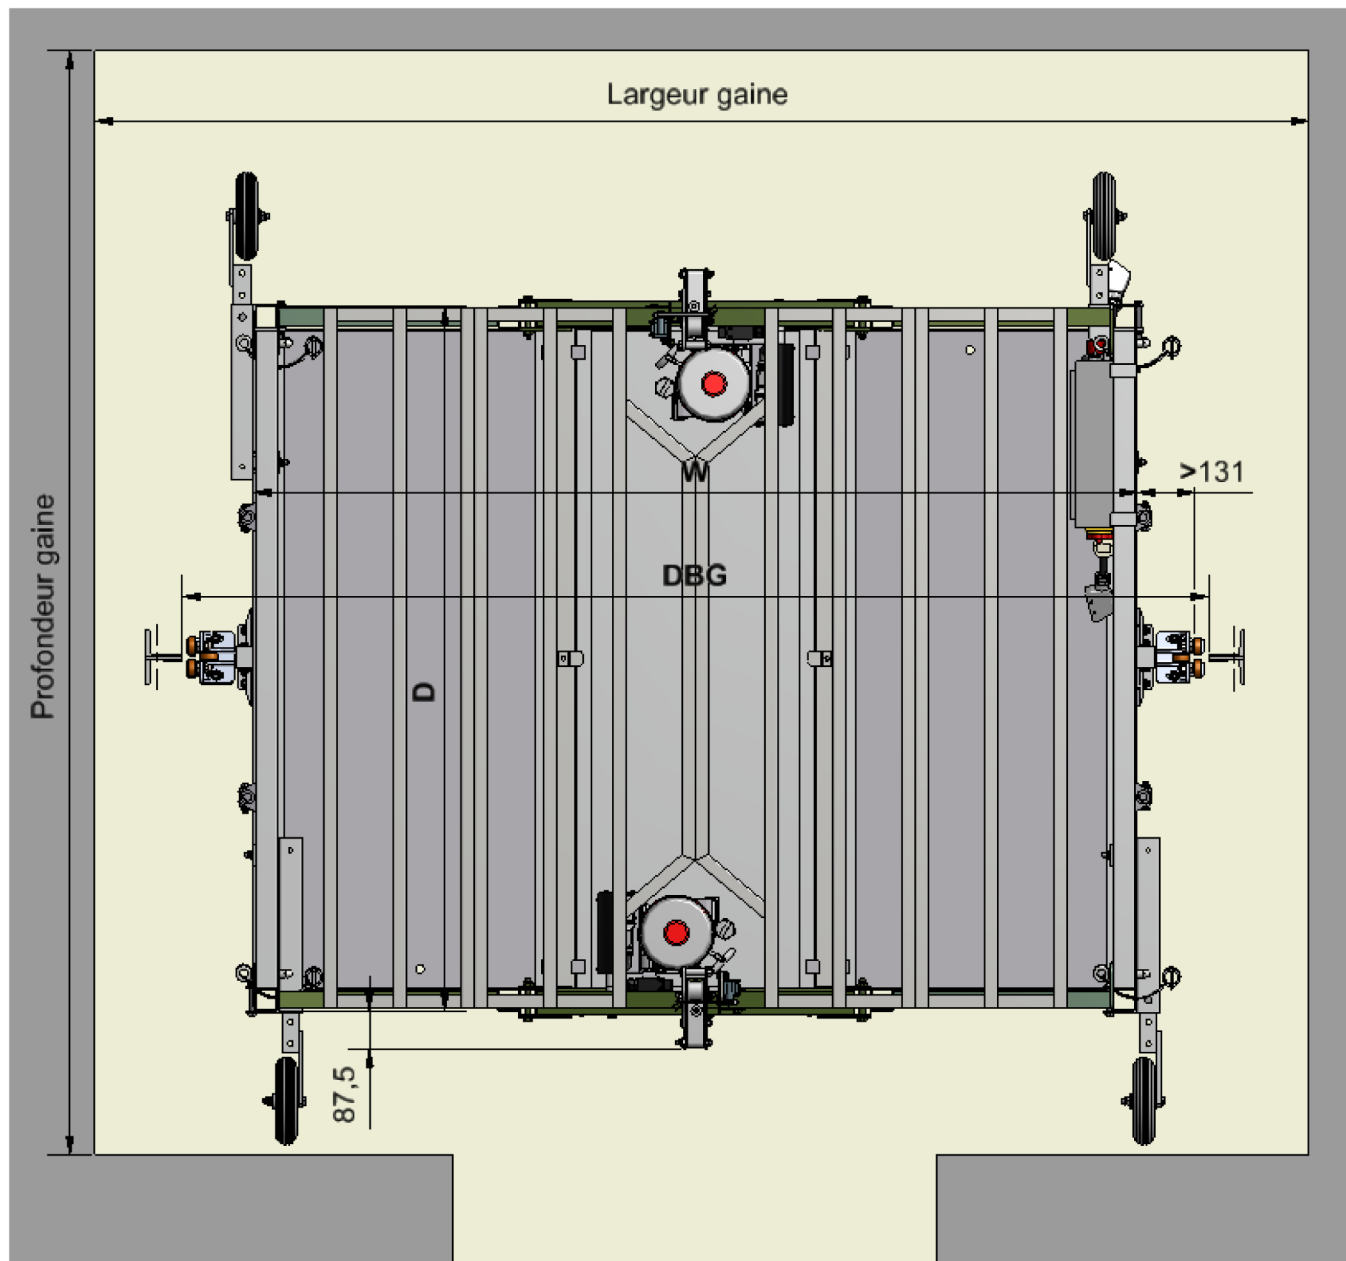

The load capacity (RL) of your temporary suspended shaft platform varies depending on its configuration:

	Config. A2, B1	Config. AA4	Config. A4, B3, B4, C3, C4, D2, D3, D4
RL	240kg	400kg	500kg
No. of persons	2p	3p	3p

- the name of the person in charge of equipment
- operators' names and dates / periods of use
- serial numbers of components (hoists, security systems, etc.)
- the number of hours of use,
- the characteristics of the cables used
- the number of hours the cables are used,
- a record of incidents and actions taken to remedy them
- forecast dates of periodic inspections and record of actual dates of inspections

1.5 Machine logbook,

The contents of the logbook of this machine are not provided; it is up to the owner to create or acquire one in which the following is noted: