

Reconnect and press the power button - item 6

- Limit switches of each hoist (see 2.2.2.1.3 and 2.2.2.1.4 )
- Tilt control in the electrical cabinet (see § 2.2.2.3.2 ) Correct the level of your platform and press the power button - item 6
- Overload of hoists (see § 2.2.2.1.2 )

At any time, in case of imminent danger or need, press the red punch button to stop any movement of your hoist. (item 6- item 2)



**DANGER:** Before opening the cabinet or hoist, disconnect the power.

### 2.1.4 Installation of cables for lifting and safety




Use protective gloves when handling wire rope.

Check the distance between the hoist cables and their position in the shaft so that they are appropriate for your platform configuration.

Check the condition of the cable and its length.

Avoid the formation of loops when unwinding.

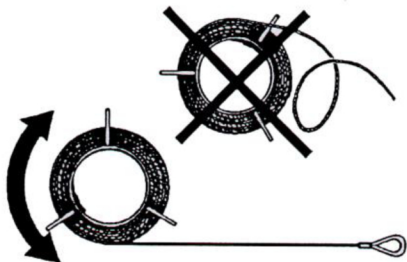

The end of the cable should be clean and sharp.



#### 2.1.4.1 Inserting the hoisting cable; removing

- Turn the electric cabinet on
- Check that the various safeguards are not activated (limit switch, level, phase sequence control etc.)
- Pass the end of the cable between the roller of the SECURISTOP 600 and the spacer
- Insert the tip of the hoist cable to the stop in one hoist.
- Turn the level selector to control one hoist.
- Press UP and continue to push the cable by hand until it comes out of the hoist.
- Guide the end of the cable to the bore in the floor.
- Press the UP button until the cable is slightly taut. (Make sure it is not wrapped around equipment)
- Repeat for the second hoist
- Do not attach the lower part of the cable or prevent rotation

To remove the hoisting cable:

- Press the DOWN button to lower the platform to the ground
- First remove your safety cable from the SECURISTOP 600
- OPTION-if your hoist is equipped with a "CABLE SLACK" safety feature, press the "OK / shunt" of a hoist to bypass this feature
- Press the DOWN button to reel the cable out of your hoist; (Make sure it is not wrapped around equipment)
- repeat for the other hoist.

#### 2.1.4.2 Introduction of the safety cable; dismantling



Before engaging the safety cable, make sure it is not wrapped around the hoisting cable.

- Connect the cable by hand through the Sécurichute 600
- Slightly tighten the cable.
- Repeat for the second hoist
- Press the UP button to raise the platform 50 cm
- Hook cable grip pliers and a 20kg counterweight to the safety cable, about 20 cm above the ground.
- Roll up the unused cable length.